

# ZX-60

WATERPROOF 4K UHD DUAL  
SCREEN ACTION CAMERA

**USER MANUAL**



**ZERO-X**



# CONTENTS

<b>1.0</b>	<b>INTRODUCTION</b> .....	<b>6</b>
<b>2.0</b>	<b>ABOUT THE ZX-60</b> .....	<b>6</b>
<b>3.0</b>	<b>WHAT'S IN THE BOX</b> .....	<b>7</b>
<b>4.0</b>	<b>COMPONENTS</b> .....	<b>7</b>
<b>5.0</b>	<b>GETTING STARTED</b> .....	<b>7</b>
5.1	CHARGING THE BATTERY .....	9
5.2	MICRO SD CARD COMPATIBILITY .....	10
5.3	TOUCH SCREEN COMPONENTS .....	10
5.4	POWERING ON THE ZX-60.....	10
5.5	FORMATTING THE MICRO SD CARD .....	11
<b>6.0</b>	<b>ZX-60 CONTROLS AND FUNCTIONS</b> .....	<b>12</b>
6.1	POWER ON/OFF BUTTON .....	12
6.2	SHOOT/RECORD BUTTON .....	12
6.3	MODE BUTTON .....	12
6.4	ACCESSING SYSTEM SETTINGS.....	13
6.5	SETTING THE TIME.....	13
6.6	SETTING THE DATE FORMAT .....	14

6.7	SETTING THE DATE.....	15
6.8	AUTO POWER OFF.....	16
6.9	WI-FI.....	17
6.10	WI-FI INFORMATION.....	18
6.11	RE-SET WI-FI.....	19
6.12	ROTATING IMAGE.....	20
6.13	DVR MODE.....	21
6.14	SCREEN SAVER.....	22
6.15	LED INDICATOR.....	23
6.16	KEYPAD TONE.....	24
<b>7.0</b>	<b>PICTURE AND VIDEO SETTINGS .....</b>	<b>25</b>
7.1	VIDEO MODE.....	26
7.2	SLOW MODE.....	28
7.3	LOOP MODE.....	30
7.4	LAPSE MODE.....	32
7.5	PHOTO MODE.....	34
7.6	AUTO MODE.....	36
7.7	BURST MODE.....	38

7.8	TIMER MODE.....	40
7.9	PLAYBACK MODE.....	42
<b>8.0</b>	<b>RESTORE DEFAULT SETTINGS.....</b>	<b>43</b>
<b>9.0</b>	<b>FIRMWARE VERSION.....</b>	<b>44</b>
<b>10.0</b>	<b>INSTALLING AND USING THE ZX-ACTION APP.....</b>	<b>45</b>
<b>11.0</b>	<b>MANUAL STEPS FOR CONNECTING TO ZX-ACTION APP.....</b>	<b>45</b>
11.1	ZX-ACTION APP.....	46
11.2	SAVING PHOTOS AND VIDEOS VIA THE APP.....	47
11.3	REMOTE PHOTO/RECORD VIA THE APP.....	48
11.4	ADJUSTING SETTINGS VIA THE APP.....	48
<b>12.0</b>	<b>WARRANTY TERMS AND CONDITIONS.....</b>	<b>49</b>

## 1.0 INTRODUCTION

Thank you for purchasing the ZX-60 action camera. Please read through this User Manual before attempting to use the ZX-60.

### FEATURES

- 4K UHD Recording
- 1.4" LCD Front Display Screen
- 2.0" LCD Display Screen
- Waterproof without protective case of up to 10m underwater

## 2.0 ABOUT THE ZX-60

The Zero-X ZX-60 shoots footage with dynamic realism, where action is effortlessly captured into moments you can keep. The ZX-60 comes with a range of included accessories to create fully immersive footage. To learn more about our extended accessory range and for details on stockists, please visit the Zero-X website.

[www.zero-x.com.au](http://www.zero-x.com.au) | [www.zero-x.co.nz](http://www.zero-x.co.nz)

 
Please note that the ZX-60 is waterproof up to a depth of 10m/1 atm without its waterproof case.

A waterproof case is also included with the ZX-60 to use as a protective case during action sports (such as if the camera is dropped on a hard surface), and also if you want to submerge the camera up to 30m underwater.

### 3.0 WHAT'S IN THE BOX

- |                                 |                      |
|---------------------------------|----------------------|
| 1 x ZX-60 Action Camera         | 1 x Frame Mount      |
| 1 x USB Charging and Data Cable | 4 x Straps           |
| 1 x Waterproof Casing           | 1 x Helmet Base      |
| 1 x Bike Mount                  | 1 x Adaptor Mount    |
| 2 x Quick Release Mounts        | 1 x Metal Tether     |
| 2 x 3M Adhesive Mounts          | 2 x 3M Adhesive Pads |
| 3 x 3-Way Mounts                |                      |

### 4.0 COMPONENTS

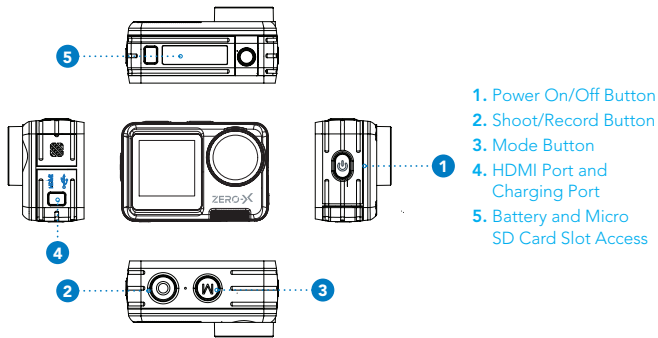

## 5.0 GETTING STARTED

**CAUTION:**

Before using your action camera, please ensure you read and understand the following product and safety precautions.

- Do not use the ZX-60 without its waterproof case in water deeper than 10m.
- Do not use the ZX-60 with its waterproof case in water deeper than 30m.
- Always check the waterproof case seal is clean and free of debris prior to use in water.
- Do not attempt to open the ZX-60 or modify it in any way. The warranty will be void if the ZX-60 has been tampered with or modified. Maintenance and repairs should only be performed by Zero-X.
- Only recharge the ZX-60 battery using the supplied USB cable.
- Do not use the ZX-60 in temperatures that exceed 55°C.



- Do not drop, crush, pierce, bend, deform, microwave or incinerate the ZX-60.

### **BATTERY WARNING**

Always charge the ZX-60 using the provided USB cable. If the ZX-60 is not charged as directed in this manual, the battery may become damaged and fail.

- Never dismantle the ZX-60 or expose the internal battery cell.
- Do not dispose of the ZX-60 in fire.
- Please dispose of the ZX-60 mindfully and observe local regulations, especially in regards to the safe disposal of the internal battery. Check your local recycling facility for more information.
- Only use a certified 5V 1.5A USB charger to charge the ZX-60. Using non-certified chargers could potentially damage the ZX-60 or its battery and void the warranty.
- Do not let the battery charge overnight.
- If the ZX-60 seemed to need charging after three hours, temporarily remove it from its charger as the battery may overheat. Let it cool down for 30 minutes and try charging again.

## 5.1 CHARGING THE BATTERY

 
We recommend that you fully charge the ZX-60 before use. A full charge will take approximately 3 hours using a 5V 1.5A charger.

## 5.2 MICRO SD CARD COMPATIBILITY

The ZX-60 requires a Micro SD Card (not included) to save the files. We recommend you use a maximum 128GB, UHS Class 3 or higher Micro SD Card from a well known brand.

**NOTE:** There is only one correct way to insert the Micro SD Card into the ZX-60. It should easily slide in. Do not force the card into the slot as it may damage the unit and the card.

## 5.3 TOUCH SCREEN COMPONENTS

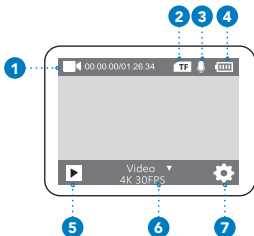

1. Current Mode
2. Micro SD Card Inserted
3. Microphone On
4. Battery Level
5. Playback
6. Mode Selection
7. Settings




## 5.4 POWERING ON THE ZX-60

To power **ON** the ZX-60 follow the steps below:

1. Insert the battery into the unit.
2. Press and hold the **ON/OFF BUTTON** at the side of the unit until the start up screen appears.

## 5.5 FORMATTING THE MICRO SD CARD

Before you start using the ZX-60, we recommend that you format the Micro SD card. You can format the Micro SD card using the ZX-60. The instructions are as follows:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. Once the ZX-60 is fully charged, insert the Micro SD Card into the correct slot (see the **"4.0 COMPONENTS"**).
3. **PRESS** the **ON/OFF BUTTON** at the side of the unit to turn **ON** the ZX-60.
4. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
5. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted blue.

6. Scroll down the list by swiping from bottom to top until you reach **FORMAT SD CARD**. **PRESS** on this option.
7. You will be prompted with the options **FORMAT** and **CANCEL**. **PRESS** on the option that you require. The Micro SD card will now format.

**NOTE:** Formatting the Micro SD card will permanently erase all data stored on the Micro SD card. Be sure to back up all saved data prior to formatting.

## 6.0 ZX-60 CONTROLS AND FUNCTIONS

### 6.1 POWER ON/OFF BUTTON

The **ON/OFF BUTTON** is located at the side of the ZX-60. This is used to turn **ON/OFF** the unit.

The **ON/OFF BUTTON** is also used to change between the Video/Photo in preview interface, and the Video Settings, Photo Settings, General Settings and Exit in setting menu. It also serves as the back button when you are in the navigation settings.

### 6.2 SHOOT/RECORD BUTTON

The **SHOOT/RECORD BUTTON** is located at the top right of the ZX-60. This button is used to shoot images and also record videos (start and stop videos).



Press and hold the **SHOOT/RECORD BUTTON** to activate the Wi-Fi function, short press the **SHOOT/RECORD BUTTON** to turn off Wi-Fi and confirm your selection in the setting menu.

### 6.3 MODE BUTTON

The **MODE BUTTON** is located at the top left of the ZX-60. This button is used to change between Video/Picture Modes Playback - Settings - Exit and to scroll down in the setting menu. Press and hold the **MODE BUTTON** for around 3 seconds to toggle between the back display screen and front display screen.

### 6.4 ACCESSING SYSTEM SETTINGS




You can access system settings when using any of the camera modes.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.

### 6.5 SETTING THE TIME

To set the correct time on the ZX-60, follow the steps below. You can set the time and date in separate settings.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.




2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **TIME SETTING**. **PRESS** on this option. The time settings screen will pop up.
5. You will be prompted to fill in the current hour, minute and seconds. Navigate by pressing either the hour, minute and second on the screen. To change the numbers, **PRESS** the **UP** and **DOWN ARROWS** on the screen until you reach the required number.
6. Once you have adjusted the time, confirm by pressing the **TICK** on the screen in the top right corner. The time will now be updated.

**NOTE:** The option which is bold and black is the active selection. Non-active options are grey. The time is set as HH:MM:SS.

## 6.6 SETTING THE DATE FORMAT

The ZX-60 has a choice of 3 date formats, including how the date is displayed. The options are **YYYY/MM/DD**, **MM/DD/YYYY** and **DD-MM-YYYY**. The ZX-60 default setting is **DD/MM/YYYY**.




To change, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop-up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **DATE FORMAT**. **PRESS** on this option. The **DATE FORMAT SETTINGS** screen will pop up.
5. **PRESS** on the option that you prefer. The **DATE FORMAT** will now be updated.

## 6.7 SETTING THE DATE

To set the correct date on ythe ZX-60, follow the steps below. You can set the time and date in separate settings.




1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.

2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **DATE SETTING**. **PRESS** on this option. The **DATE SETTING** screen will pop up.
5. You will be prompted to fill in the current year, month and day. Navigate through by pressing on either year, month and day on the screen. To change the numbers, **PRESS** the **UP** and **DOWN ARROWS** on the screen until you reach the required number.
6. Once you have adjusted the date, confirm this by pressing the tick on the screen in the top right corner. The time will now be updated.

## 6.8 AUTO POWER OFF

The auto power off function is designed to help extend the battery life of the ZX-60. The ZX-60 will automatically **POWER OFF** after a selected period of inactivity (**3, 5, 10 MINUTES** and **OFF**). The factory default is **3 MINUTES**. To change this setting, follow the steps below:






1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **AUTO POWER OFF**. **PRESS** on this option. The **AUTO POWER OFF SETTINGS** screen will pop up.
5. You can scroll through the options by swiping up and down on the screen. **PRESS** on the option that you prefer. The setting will now be updated.

## 6.9 WI-FI

The ZX-60 comes with a built-in Wi-Fi, allowing you to easily access your footage and photos through your smartphone. The ZX-60 default setting is **OFF**. For more information, see '**11.1 ZX-ACTION APP.**' To change this setting, follow the steps below:




1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.

2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **WI-FI**. You will notice a box on the right of screen with **TURN OFF** next to it. **PRESS** on this box. The Wi-Fi is now activated.
5. To exit out of **WI-FI MODE**, **PRESS** the **SHOOT/RECORD BUTTON**.

**NOTE:** When Wi-Fi is connected to your smartphone, you cannot use the functions on the ZX-60 via the camera. However, you can manage functions via the app in this mode. You can also use your smartphone as a wireless recording monitor when in Wi-Fi mode. You can control the functions on the ZX-60 once the ZX-ACTION App is disconnected from your smartphone.




## 6.10 WI-FI INFORMATION

If you need to find out the connection name and password of the ZX-60 Wi-Fi ID, you can find this at the Wi-Fi information section. To access this, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **WI-FI INFORMATION**. **PRESS** on this option to see the Wi-Fi ID information.
5. Wi-Fi information will have the **WI-FI ID** and **WI-FI PASSWORD**. The Wi-Fi Name will be ZX-60\_XXXX (XXXX will be unique to every action camera) Password: **1234567890**

## 6.11 RE-SET WI-FI


If you need to re-set the ZX-60 Wi-Fi connection, follow the steps below:


1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **RESET WI-FI**. **PRESS** on this option.
5. You will be prompted to confirm or cancel. **PRESS** on the option you require. If you **PRESS** confirm, the **WI-FI** will be re-set.

## 6.12 ROTATING IMAGE

You have the ability to flip the image vertically (upside down) when you are using the ZX-60 by turning on this function. The ZX-60 default setting is **OFF**. To change this setting, follow the steps below:




1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen

to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.

3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. **IMAGE ROTATION** is the first option on the settings menu. You will notice there is a small box with **TURN OFF** next to it. **PRESS** the box to activate this function. It will now say **TURN ON**. The camera image will now be flipped vertically (upside down).

## 6.13 DVR MODE




When **DVR MODE** is activated, the ZX-60 will continue to record until the unit has run out of power. The default setting is **OFF**. To change this setting, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach

**DVR MODE.** You will notice there is a small box with **TURN OFF** next to it. **PRESS** the box to activate this function. It will now say **TURN ON.**

## 6.14 SCREEN SAVER

You can record videos and conserve power with the screen saver function, allowing the LCD display to turn OFF while the ZX-60 continues to record. There is a choice of 4 options to activate the screen saver function: **30 SECONDS, 1 MINUTE, 2 MINUTES** and **OFF.** The default setting is set to **30 SECONDS.** To change this setting, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU.** A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **SCREEN SAVER.** **PRESS** on this option. The **SCREEN SAVER SETTINGS** screen will pop up.
5. You can scroll through the options by swiping **UP** and **DOWN** on




the screen. **PRESS** on the option that you prefer. The setting will now be updated.

## 6.15 LED INDICATOR

The ZX-60 has LED indicator lights that allow you to see if a function is active. There are two small LED indicator lights at the left side of the screen:

- The **RED LED** indicator light shows that the ZX-60 is charging.
- The **BLUE LED** indicator light will stay solid blue when the unit is not recording, and will flash in blue during recording.




The default setting is set to **ON**. To change this setting, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop-up with two locks and arrows will appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **LED INDICATOR**. You will notice there is a small box with a tick on it and **TURN ON** next to it. **PRESS** the box to deactivate this

function. It will now say **TURN OFF**.

## 6.16 KEYPAD TONE

You have the ability to change the volume of your keypad tone on the ZX-60. There are 3 volume settings (High, Medium and Low). The default setting is Medium. To change, follow the steps below.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **KEYPAD TONE**. **PRESS** on this option. The **KEYPAD TONE SETTINGS** screen will pop up.
5. You can scroll through the options by swiping **UP** and **DOWN** on the screen. **PRESS** on the option that you prefer. The setting will



now be updated.

## 7.0 PICTURE AND VIDEO SETTINGS

There are multiple shooting functions that the ZX-60 offers. You have a choice of 8 options: **VIDEO**, **SLOW**, **LOOP**, **LAPSE**, **PHOTO**, **AUTO**, **BURST** and **TIMER**. To access the mode selection panel, follow the steps below:


1. On the back screen, press the **MODE SELECTION** drop down (See “**5.3 TOUCH SCREEN COMPONENTS**”). This will open up the screen (image to the right) where you can select a **MODE** from this panel.

VIDEO	SLOW	LOOP	LAPSE
Stands for <b>VIDEO MODE</b>	Stands for <b>SLOW MOTION MODE</b>	Stands for <b>LOOP RECORDING MODE</b>	Stands for <b>TIME LAPSE MODE</b>
PHOTO	AUTO	BURST	TIMER
Stands for <b>PHOTO MODE</b>	Stands for <b>AUTO PHOTO MODE</b>	Stands for <b>BURST MODE</b>	Stands for <b>PHOTO TIMER MODE</b>

## 7.1 VIDEO MODE

To use **VIDEO MODE**, follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press on **VIDEO** to activate this mode.

There are multiple settings in this mode that you can adjust to your preferred option. To change these settings, please follow the steps below once you are in **VIDEO MODE**.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the settings menu. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. The settings will open up **VIDEO MODE SETTINGS** automatically. Swipe up and down to scroll through and adjust the settings.
4. To adjust, **PRESS** on the setting you wish to change and **PRESS** on the option you wish to change. This will update the setting.

*Please see the table to view other available settings.*

**NOTE:** These settings are applicable for **VIDEO MODE** only.



SETTING	OPTIONS	ZX-60 DEFAULT
Resolution	4K @ 60 FPS, 4K @ 30 FPS, 2.7K @ 30FPS, 1080P @ 120FPS, 1080P @ 60 FPS, 1080P @ 30FPS, 720P @ 240FPS, 720P @ 120FPS, 720P @ 60 FPS, 720P @ 30FPS	4K @30 FPS
Electronic Image Stabilisation	ON / OFF	ON
Distortion Correction	ON / OFF	OFF
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
ISO	Auto /100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Time Stamp	ON / OFF	ON
Microphone	ON / OFF	ON

**NOTE:** When **ELECTRONIC IMAGE STABILISATION** is turned **ON**, **DISTORTION CORRECTION** will be **OFF** and vice versa.

## 7.2 SLOW MODE

To use **SLOW MODE** (Slow Motion), follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **SLOW** to activate this mode.

There are multiple settings in this mode that you can adjust to your preferred option. To change these settings, please follow the steps below once you are in **SLOW MODE**.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to **PRESS** the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. The settings will open up **SLOW MODE SETTINGS** automatically. Swipe up and down to scroll to adjust settings.
4. To adjust, **PRESS** on the setting you wish to change and **PRESS** the option you wish to change. This will update the setting.

Please see the table to view other available settings.



**NOTE:** These settings are applicable for **SLOW MOTION MODE** only.

SETTING	OPTIONS	ZX-60 DEFAULT
Resolution	1080P 4X, 1080P 2X, 720P 8X, 720P 4X	1080P 4X
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
Video Quality	High / Middle / Low	High

### 7.3 LOOP MODE

To use **LOOP MODE** (also known as Loop Recording), follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **LOOP** to activate this mode.

There are multiple settings in this mode that you can adjust to your preferred option. To change these settings, please follow the steps below once you are in **LOOP MODE**.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. The settings will automatically open **LOOP MODE**.  
Swipe up and down to scroll through and adjust the settings.
4. To adjust, **PRESS** on the setting you wish to change and **PRESS** on the option you wish to change. This will update the setting.

Please see the table to view other available settings.

**NOTE:** These settings are applicable for **LOOP RECORDING MODE** only.



SETTING	OPTIONS	ZX-60 DEFAULT
Resolution	4K @ 60 FPS, 4K @ 30 FPS, 2.7K @ 30FPS, 1080P @ 120FPS, 1080P @ 60 FPS, 1080P @ 30FPS, 720P @ 240FPS, 720P @ 120FPS, 720P @ 60 FPS, 720P @ 30FPS	4K @ 30 FPS
Loop Recording	2 / 3 / 5 Mins	2 Mins
Electronic Image Stabilisation	ON / OFF	ON
Distortion Correction	ON / OFF	OFF
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Video Quality	High / Middle / Low	High
Time Stamp	ON / OFF	ON
Microphone	ON / OFF	ON

**NOTE:** When **ELECTRONIC IMAGE STABILISATION** is turned **ON**, **DISTORTION CORRECTION** will be **OFF** and vice versa.

## 7.4 LAPSE MODE

To use **LAPSE MODE** (also known as time lapse mode which takes a sequence of photos in a selected interval of time). Follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **LAPSE** to activate this mode.

There are multiple settings in this mode that you can adjust. To change these settings, please follow the steps below once you are in **LAPSE MODE**.

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. The settings will open **LAPSE MODE SETTINGS** automatically. Swipe up and down to scroll through and adjust the settings.
4. To adjust, **PRESS** on the setting you wish to change and **PRESS** on the option you wish to change. This will update the setting.



Please see the table to view other available settings.

**NOTE:** These Settings are applicable for **TIME LAPSE MODE** only.



SETTING	OPTIONS	ZX-60 DEFAULT
Resolution	4K / 2.7K / 1080P / 720P	4K
Interval	0.5 Secs / 1 second / 2 seconds / 5 seconds / 10 seconds / 30 seconds / 60 seconds	0.5 seconds
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Video Length	Unlimited / 6 seconds / 8 seconds / 10 seconds / 20 seconds / 30 seconds / 60 seconds / 120 seconds	Unlimited
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle

ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Video Quality	High / Middle / Low	High

## 7.5 PHOTO MODE

To use **PHOTO MODE**, follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **PHOTO** to activate this mode.

There are multiple settings in this mode that you can adjust to your preferred option. To change these settings, please follow the steps below once you are in **PHOTO MODE**.

1. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
2. The settings will open **PHOTO MODE SETTINGS** automatically. Swipe up and down to scroll through and adjust the settings.
3. To adjust, select the setting you wish to change and **PRESS** the option you wish to change. This will update the setting.

Please see the table to view other available settings.



**NOTE:** These settings will be applicable for **PHOTO MODE** only.

<b>SETTING</b>	<b>OPTIONS</b>	<b>ZX-60 DEFAULT</b>
Image Resolution	16 / 13 / 8 Megapixels	16M
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
Long Exposure	Auto / 2 / 5 / 10 / 15 / 20 / 30	Auto
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Time and Date Stamp	ON / OFF	ON

## 7.6 AUTO MODE

To use **AUTO MODE** (takes continuous photos with a selected time interval between each photo), follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **AUTO** to activate this mode.

There are multiple settings in this mode where you can select your preferred option. To change these settings, please follow the steps below once you are in **AUTO MODE**.

1. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop-up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
2. The settings will open **AUTO MODE SETTINGS** automatically. Swipe up and down to scroll through and adjust the settings.
3. To adjust, **PRESS** on the setting you wish to change and **PRESS** on the option you wish to change. This will update the setting.

*Please see the table to view other available settings.*



**NOTE:** These settings will be applicable for **AUTO MODE** only.

<b>SETTING</b>	<b>OPTIONS</b>	<b>ZX-60 DEFAULT</b>
Image Resolution	16 / 13 / 8 Megapixels	16M
Time Interval	3 seconds / 10 seconds / 15 seconds / 20 seconds / 30 seconds	3 seconds
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Time and Date Stamp	ON / OFF	ON

## 7.7 BURST MODE

To use **BURST MODE** (takes a preset amount of photos in one second), follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **BURST** to activate this mode.

There are multiple settings in this mode where you can select your preferred option. To change these settings, please follow the steps below once you are in **BURST MODE**.

1. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
2. The settings will open **BURST MODE SETTINGS** automatically. Swipe up and down to scroll and adjust the settings.
3. To adjust, **PRESS** on the setting you wish to change and **PRESS** on the option you wish to change. This will update the setting.

Please see the table to view other available settings.



**NOTE:** These settings will be applicable for **BURST MODE** only.

<b>SETTING</b>	<b>OPTIONS</b>	<b>ZX-60 DEFAULT</b>
Image Resolution	16 / 13 / 8 Megapixels	16M
Photo Frequency	3 Pictures/sec, 5 Pictures/sec, 10 Pictures/sec	3 Pictures/sec
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Time and Date Stamp	ON / OFF	ON

## 7.8 TIMER MODE

To use **TIMER MODE** (takes photos with a preselected timed countdown), follow the steps under '**7.0 PICTURE AND VIDEO SETTINGS.**' Press **TIMER** to activate this mode:

There are multiple settings in this mode where you can select your preferred option. To change these settings, please follow the steps below once you are in timer mode.

1. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the **SETTINGS MENU**. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
2. The settings will open **TIMER MODE SETTINGS** automatically. Swipe up and down to scroll through and adjust the settings.
3. To adjust, **PRESS** on the setting you wish to change and **PRESS** on the option you wish to change. This will update the setting.


*Please see the table to view other available settings..*


 

**NOTE:** These settings will be applicable for **TIMER MODE** only.



SETTING	OPTIONS	ZX-60 DEFAULT
Image Resolution	16 / 13 / 8 Megapixels	16M
Count Down	3 seconds / 5 seconds / 10 seconds / 20 seconds	3 seconds
White Balance	Auto / Sunny / Cloudy / Incandescent / Fluorescence	Auto
Exposure	3 / 2 / 1 / 0 / -1 / -2 / -3	0
Metering Mode	Average Metering / Centre Metering / Spot Metering / Matrix Metering	Average Metering
Sharpness	High / Middle / Low	Middle
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200 / 6400	Auto
Time and Date Stamp	ON / OFF	ON



## 7.9 PLAYBACK MODE

To view photos and the videos you have taken with the ZX-60 use **PLAYBACK MODE**. To operate, **PRESS** the  **ICON** at the bottom left on the screen. This will open up the **PHOTO/VIDEO GALLERY**.

To scroll through the photos and videos, **PRESS** the  **ICON** to navigate left and **PRESS** the  **ICON** to navigate right. If it is a video, a  **ICON** will appear in the middle of the screen.

To exit **PLAYBACK MODE**, **PRESS** the **BACK BUTTON** at the bottom left of the screen. Alternatively, you can also **PRESS** the **UP BUTTON** to exit playback mode.

### 7.9.1 WATCHING VIDEOS IN PLAYBACK MODE

To watch videos in playback mode, **PRESS** the  **ICON** that is in the middle of the video, or **PRESS** the **SHOOT/RECORD BUTTON**. To pause this video, **PRESS** the  **ICON** that is in the middle of the video, or press the **SHOOT/RECORD BUTTON** again.




### 7.9.2 DELETING FILES IN PLAYBACK MODE

To delete any files that have been taken on the ZX-60 or are on the Micro SD Card, **PRESS** the **TRASH CAN ICON** at the bottom right corner of the screen. You will be prompted to confirm or cancel. **PRESS CONFIRM** to delete.

## 8.0 RESTORE DEFAULT SETTINGS

This setting will restore the ZX-60 to factory default. All setting adjustments made to the unit will be erased.

If you need to restore to factory settings, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the settings menu. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current




section tab will be highlighted in blue.

4. Scroll down the list by swiping from bottom to top until you reach **RESTORE DEFAULT SETTING**. **PRESS** on this option. You will be prompted to either confirm or cancel. **PRESS** the option you require.

Once the ZX-60 factory reset has been confirmed, the unit will turn off. You will need to turn on the unit again by **PRESSING** the **ON/OFF BUTTON**.

## 9.0 FIRMWARE VERSION

To check the current **FIRMWARE** of your ZX-60, follow the steps below:

1. If you are currently in **VIDEO MODE** and **RECORDING**, you will need to press the **SHOOT/RECORD BUTTON** to end the recording first.
2. **PRESS** the  **BUTTON** at the bottom right of the back screen to open up the settings menu. A pop up with two locks and arrows may appear. Swipe from left to right. You may need to **PRESS** the  **BUTTON** again.
3. **PRESS** the  tab at the left side of the screen. The current section tab will be highlighted in blue.
4. Scroll down the list by swiping from bottom to top until you reach **FIRMWARE VERSION**. **PRESS** on this option.
5. To exit, **PRESS** the **ON/OFF BUTTON** once, and then **PRESS** the back button on the screen. This will take you back to the camera's shoot mode.

**NOTE:** To check if there is a new firmware version available for your action camera, or for instructions on how to update its firmware, please check for updates at [www.zero-x.com.au](http://www.zero-x.com.au) | [www.zero-x.co.nz](http://www.zero-x.co.nz)

## 10.0 INSTALLING AND USING THE ZX-ACTION APP

Please scan the QR code below.

OR

Please search the Apple App store or Google Play Store for '**ZX-ACTION**'.

**NOTE:** The **ZX-ACTION App** requires iOS 10.0 and above or Android 5.0 and above to run. When using the App, please note: Android users will be taken to a home screen before entering the shoot screen. iPhone users will be taken straight to the shoot screen once they have connected the ZX-60 to the App.

## 11.0 MANUAL STEPS FOR CONNECTING TO ZX-ACTION APP

Turn on your phone and scan the QR code or search the Apple App store or Google Play Store for **ZX-ACTION** and download the App.



## 11.1 ZX-ACTION APP

The ZX-60 has a built-in Wi-Fi connection which is used to wirelessly connect your smartphone to your ZX-60, allowing you to use your smartphone as an external wireless monitor, view files, change settings and trigger recording on your smartphone. To connect your smartphone to the ZX-60, follow the steps below:

1. If you are using an Android smartphone, go to the Google Play Store. If you are using an iPhone, go to the Apple App store.
2. Search for the **ZX-ACTION** app. Once you have found this App, download and install it. Alternatively you can scan the above QR code to take you directly to the App.

### CONNECTING TO THE ZX-60 WI-FI


1. Once the App is downloaded, go to your smartphone's Wi-Fi settings and select the device name; ZX-60\_XXXX. (XXXX will be the unique number to your ZX-60). Please see section '**6.8 WI-FI.**' for further information about connecting through Wi-Fi.
2. Once you have connected the ZX-60 to your smartphone, a tick icon will appear next to the name. You can open the **ZX-ACTION App** on your smartphone.

**NOTE:** Ensure that Wi-Fi on the ZX-60 and your smartphone are both turned on. If the Wi-Fi on your smartphone is off, turn it on and refresh the search. To learn how to turn on Wi-Fi on the ZX-60, please see section '**6.8 WI-FI.**' Do not connect to any other Wi-Fi when you are connecting the ZX-60 to its App.

3. The App will prompt you to connect to a network. Make sure the ZX-60\_XXXX is the one that comes up. Connect to the network accordingly.

## 11.2 SAVING PHOTOS AND VIDEOS VIA THE App

All files that are created on the ZX-60 will be automatically saved to the Micro SD card that is currently inserted into it. However, you can also save these files wirelessly onto your smartphone through the **ZX-ACTION App**. To save photos wirelessly, follow the steps below:

1. Launch the **ZX-ACTION App** on your smartphone.
2. On the home screen, **PRESS** the circle with the image at the left of the mode icon within the App.
3. Once you are in the gallery, you will see the highlighted image at the top bar of the App. If ZX-60 is not highlighted, **PRESS** the tab.
4. **PRESS** the  **ICON** at the top right corner of the gallery page in the App to open the download screen. You will be prompted to select either **DOWNLOAD** or **DELETE**. **PRESS DOWNLOAD**.
5. You can now select all the files you wish to download by pressing on each photo you want, or **PRESS ALL** at the bottom left corner of the screen to download every photo.
6. **PRESS CONFIRM** at the bottom right of the screen to begin the download.


### 11.3 REMOTE PHOTO/RECORD VIA THE APP

If you wish to use the App to remotely take a photo or record a video, please follow the steps below:

1. Launch the **ZX-ACTION App** on your smartphone.
2. The App will open with the **REMOTE SHOOTING** screen.
3. You can choose between video, camera and slow motion by clicking on the matching icons. (The large video or photo icon on the screen). Each icon will have the different shooting options appearing above it. Select your preferred option.
4. **PRESS** the same icon for the mode you have chosen again to either take the photo or begin recording.

### 11.4 ADJUSTING SETTINGS VIA THE APP

If you prefer to change the settings of the ZX-60 via the App, you can do this through the settings tab. You can adjust the settings for the mode you are shooting in, as well as the software settings for the ZX-60. Follow the steps below:

1. Press the  **ICON** at the top right of the App screen to edit the **PHOTO MODE** settings.

OR

2. Press the  **ICON** at the top right of the App screen to edit the software settings on the ZX-60.

All the settings are listed on this screen under each category. To either change or turn them on, press on the required tab and select the option you prefer.



## 12.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics, will be borne by you.

**EMAIL:** [admin@zero-x.com.au](mailto:admin@zero-x.com.au)

## **INDEMNITY**

You agree to defend, indemnify and hold harmless Zero-X and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Zero-X and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Zero-X products or its services, or your unauthorized modification or alteration of products or software.

## **WARRANTY AND WARRANTY DISCLAIMER**

Zero-X has a limited warranty, whereby Zero-X warrants to you and only to you that this Zero-X product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Zero-X limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Zero-X product you understand and agree that the Zero-X services are provided on an “as is” and “as available” basis.

Zero-X makes no warranty that the Zero-X product and services will meet your requirements or that use of the Zero-X services will be uninterrupted, timely, secure or error-free. Nor does Zero-X make any warranty as to the accuracy or reliability of any information obtained through Zero-X (including third party content), that any defects in the Zero-X products or services be corrected or

that the Zero-X products or Zero-X services will be compatible with any other specific hardware or service.

Further, Zero-X does not warrant that Zero-X products or services or Zero-X servers that provide you with data and content are free of viruses or other harmful components.

Zero-X also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Zero-X. In the event of any loss, damage or injury, you will not look to Zero-X to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Zero-X arising as a result of the payment of any claim for loss, damage or injury.

Zero-X equipment and services do not cause and cannot eliminate occurrences of certain events, including, and Zero-X makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Zero-X equipment and services provided will detect or avert such incidents or their consequences.

Zero-X does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Zero-X.

Other than the above product warranty for the Zero-X products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Zero-X services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Zero-X hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Zero-X does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

## **LIMITATIONS OF ZERO-X LIABILITY**

Under no circumstances will Zero-X be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Zero-X.

Zero-X liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual

duty or obligation on the part of Zero-X. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Zero-X, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Zero-X may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Zero-X's liability in the event of Zero-X's wilful or intentional misconduct.





Capture the action.™

**ZERO-X**

**ANOTHER  
DIRECTED  
BRAND**

[www.zero-x.com.au](http://www.zero-x.com.au) | [www.zero-x.co.nz](http://www.zero-x.co.nz)



All Images, Information and Content are  
Copyright © 2023 Directed Electronics  
Australia Pty Ltd. All Rights Reserved.