

ZXM-AC1

Full HD Action Camera with 2" LCD Screen

USER MANUAL



ZERO-X

CONTENTS

1.0	INTRODUCTION	5
2.0	ABOUT THE ZXM-AC1	5
3.0	WHATS IN THE BOX	6
4.0	COMPONENTS	6
5.0	GETTING STARTED	7
5.1	CHARGING THE BATTERY	8
5.2	MICRO SD CARD COMPATIBILITY	9
5.3	POWERING YOUR ZXM-AC1	9
5.4	FORMAT YOUR MICRO SD CARD.....	9
6.0	ZXM-AC1 CONTROLS AND FUNCTIONS	11
6.1	POWER ON / OFF BUTTON	11
6.2	SHOOT / RECORD BUTTON	11
6.3	ACCESSING SYSTEM SETTINGS.....	11
6.4	SETTING THE DATE & TIME	12
6.5	AUTO POWER OFF.....	13
6.6	SOUND.....	14
6.7	SCREEN SAVER.....	15
7.0	PICTURE SETTINGS	16

7.1	PHOTO MODE	16
7.2	CAPTURE MODE	17
7.3	DELAYED PHOTO	18
7.4	DATE STAMP	18
8.0	VIDEO SETTINGS	19
8.1	VIDEO MODE	19
8.2	PLAYBACK MODE	20
8.3	LOOP RECORDING	21
8.4	DATE STAMP	22
9.0	RESTORE DEFAULT SETTINGS	23
10.0	FIRMWARE VERSION	24
11.0	WARRANTY	25
12.0	NOTES	30

1.0 INTRODUCTION

Thank you for purchasing the ZXM-AC1 action camera. Please read through the User Manual before attempting to use the ZXM-AC1.

FEATURES

- 1080P Recording
- 2" Screen
- Waterproof Case

2.0 ABOUT THE ZXM-AC1

The Zero-X ZXM-AC1 shoots footage with dynamic realism, where action is effortlessly captured into moments you can keep. The Zero-X ZXM-AC1 offers a range of accessories to create fully immersive footage. To learn more about our extended accessory range and for details on stockists, please visit the Zero-X website.


www.zero-x.com.au | www.zero-x.co.nz

3.0 WHATS IN THE BOX

- 1 x ZXM-AC1 Action Camera
- 1 x USB Charging & Data Cable
- 1 x Waterproof Casing
- 1 x Bike Mount
- 1 x Quick Release Mount
- 1 x 3M Adhesive Mount

- 1 x 3 Way Mount
- 1 x Frame Mount
- 4 x Straps
- 1 x Adapter Mount Metal Teether
- 2 x 3M Adhesive Pads

4.0 COMPONENTS

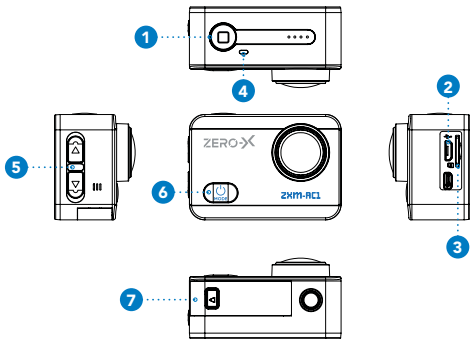

1. SHOOT / RECORD Button
2. Micro USB Charging Port
3. Micro SD Card Slot
4. LED Indicator Light
5. UP / DOWN Button
6. Power ON/OFF Button
7. Battery Port

5.0 GETTING STARTED

CAUTION:

Before using your action camera please ensure you read and understand the following product and safety precautions.

- Do not use the ZXM-AC1 in water without the waterproof case.
- Do not use the ZXM-AC1 with the waterproof case in water deeper than 30m.
- Always check the waterproof case seal is clean and free of debris before use in water.
- Do not attempt to open the ZXM-AC1 camera or modify it. If the ZXM-AC1 has been tampered with the warranty will be void. Maintenance and repairs should only be performed by Zero-X customer service representatives. Please see the warranty at the end of this manual for more information.
- Do not handle or charge the ZXM-AC1 with wet hands unless it is enclosed in its waterproof case. This will help avoid damage to your camera.
- Only recharge the ZXM-AC1 battery using the supplied USB cable.
- Do not use the ZXM-AC1 in temperatures that exceed 55°C.
- Do not drop, crush, pierce, bend, deform, microwave, incinerate or shoot the ZXM-AC1.

BATTERY WARNING

Always charge the ZXM-AC1 using the provided USB Cable. If the ZXM-AC1 is not charged as directed in this manual, the battery may become damaged and fail.

- Never dismantle the ZXM-AC1 or expose the internal battery cell.
- Do not dispose of the ZXM-AC1 in fire.
- Please dispose of the ZXM-AC1 mindfully and observe local regulations, especially in regards to the safe disposal of the internal battery. Check your local recycling facility for more information.
- Do not attempt to expose the internal battery cell.
- Only use a certified 5V 1A USB charger to charge the ZXM-AC1. Using non-certified chargers could potentially damage the ZXM-AC1, or the ZXM-AC1 battery and void the warranty.
- Do not let the battery charge overnight.
- If the ZXM-AC1 appears to still need charging after three hours, temporarily remove it from its charger as the battery may overheat. Let it cool down for 30 minutes and try charging again.

5.1 CHARGING THE BATTERY

We recommend that you fully charge your ZXM-AC1 before use. A full charge will take approximately 2.5 hours using a 5V / 1A charger.

The LED light on the back of the ZXM-AC1 indicates the status of the unit's charging cycle. It will stay RED while charging. When the ZXM-AC1 is fully charged the LED light will turn OFF.

5.2 MICRO SD CARD COMPATIBILITY

The ZXM-AC1 requires a Micro SD Card (not included) to save recorded files. We recommend that you use a maximum 32GB, Class 10 or higher Micro SD Card from a well known brand.

NOTE: There is only one correct way to insert the Micro SD Card into your ZXM-AC1. It should easily slide in. Do not force the card into the slot as it may damage the unit and the card.

5.3 POWERING YOUR ZXM-AC1

To power ON your ZXM-AC1 follow the below steps:

1. Insert the battery into the unit.
2. Press and hold the **POWER ON / OFF** Button on the front of the unit, until the start up screen appears.

5.4 FORMAT YOUR MICRO SD CARD

We recommend that you format your Micro SD card before you start using the ZXM-AC1. You can do this via the ZXM-AC1, by following these instructions:

1. Once the ZXM-AC1 is fully charged insert your Micro SD Card into the correct slot (See 4.0 COMPONENTS).
2. Press the **POWER ON / OFF** Button on the front of the unit to turn ON the ZXM-AC1.
3. Quick press the **POWER ON / OFF** Button four times on the front of the unit. This will bring you to the Settings menu. Each press will navigate through Video, Image, Playback and Settings.
4. Press the UP Button four times on the right side of the unit to navigate up the Settings menu to "Format".
5. Press the **SHOOT / RECORD** Button to open the Format section.
6. Press the **DOWN** Button to navigate to '**OK**', then press the **SHOOT / RECORD** Button again to click '**OK**'. This will initiate the formatting of the Micro SD card.

NOTE: Formatting the Micro SD card will permanently erase all data stored on the Micro SD card. We recommend you back up your data before formatting.

6.0 ZXM-AC1 CONTROLS AND FUNCTIONS

6.1 POWER ON / OFF BUTTON

The **POWER ON / OFF** Button is located at the front of the ZXM-AC1 in the bottom left corner. This is used to power the unit ON/OFF.

The **POWER ON / OFF** Button is also used to switch between the camera modes, access the settings menu and also serves as the back Button (when you are in the navigation settings).

6.2 SHOOT / RECORD BUTTON

The **SHOOT / RECORD** Button is located on the top, right hand side of the ZXM-AC1. This Button is interchangeable, and is used to shoot images and also record videos.

The **SHOOT / RECORD** Button is also used to select menu items, and confirm your selection.

6.3 ACCESSING SYSTEM SETTINGS

You can access system settings when using any of the camera modes. If you are currently in video mode and recording, you will need to end the recording first. To access system settings for the ZXM-AC1 follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.

2. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
3. Quick press the **POWER ON / OFF** Button again once in the navigation menu to navigate to the settings menu.

6.4 SETTING THE DATE & TIME

To set the correct date and time on your ZXM-AC1, turn the unit on and follow the steps below:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
3. Quick press the **POWER ON / OFF** Button again in the navigation menu to tab over to the settings menu.
4. Press the **UP** Button five times to navigate up the menu to '**date / time.**' You will see this option highlight.
5. Quick press the **SHOOT / RECORD** Button again once to open the **date / time settings.** A screen will appear with the date and time.

NOTE: The number which is highlighted yellow can be changed with the up and down Buttons. The date is set as DD/MM/YYYY, and the time is 24 hour mode and is set as HH:MM.

6. Set the correct date and time. Once you have adjusted the first value, press the **SHOOT / RECORD** Button to jump to the next value (you will notice the next value will now be highlighted blue).
7. When all adjustments have been made for **date and time**, press the **POWER ON / OFF** Button twice to exit the navigation menu.

6.5 AUTO POWER OFF

The auto power OFF function is designed to help extend the battery life of the ZXM-AC1. It will automatically power OFF after a selected period of inactivity (3, 5 or 10 minutes). To choose which option the unit will power off (3, 5 or 10 minutes), follow the steps below:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
3. Quick press the **POWER ON / OFF** Button again in the navigation menu to navigate to the settings menu.
4. Press the **UP** Button eight times to navigate up the menu to 'auto power off'. You will see this option highlighted.
5. Quick press the **SHOOT / RECORD** Button again once to open the Auto Power Off settings. Four options will appear on the menu: 3 minutes, 5 minutes, 10 minutes and OFF. Press the **DOWN** Button to the option you require.

5. Press the **SHOOT / RECORD** Button to select.
6. To exit the navigation menu, press the **POWER ON / OFF** Button.
Follow the steps for all four auto power off options.

6.6 SOUND

You have the ability to adjust the **Sound settings** in the ZXM-AC1. Sounds will come from the unit with record audio and beep sound. The ZXM-AC1 default settings for sound are:

- Record Audio: On
- Beep Sound: On

To change the sound settings, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are currently using the video mode and recording.
2. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
3. Quick press the **POWER ON / OFF** Button again in the navigation menu to navigate to the settings menu.
4. Press the **DOWN** Button four times to navigate down the settings menu to '**Record Audio**' (or eighteen times to navigate down the menu to '**Beep Sound**'). You will see the options highlight.

5. Quick press the **SHOOT / RECORD** Button again once, this will open the '**Record Audio**' or '**Beep Sound**' settings. Two options will appear on the menu: Off or On. To select one of the options, press the **SHOOT / RECORD** Button to the option you require and you will see this selection highlighted on the screen.
6. Once the settings are changed, press the **POWER ON / OFF** Button once to exit the menu navigation.

6.7 SCREEN SAVER

Record videos and conserve power with the screen saver function, which allows the LCD display to turn OFF while the ZXM-AC1 continues to record. There are four screen saver options to choose from. The ZXM-AC1 default setting is set to OFF. To either activate or change this setting, follow the below steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Quick press the **POWER ON / OFF** Button again in the navigation menu to tab over to the settings menu.
3. Press the **UP** Button nine times to navigate up the menu to '**screen saver.**' You will see this option highlight.

4. Quick press the **SHOOT / RECORD** Button again once to open the Sound settings. Four options will appear on the menu: 1 minute, 3 minutes, 5 minutes and OFF. Press the **UP / DOWN** Button to the option you require.
5. Press the **SHOOT / RECORD** Button to select.
6. To exit the navigation menu, press the **POWER ON / OFF** Button. Follow the steps for all four screen saver options.

7.0 PICTURE SETTINGS

7.1 PHOTO MODE

Before you take a still photo, ensure that you are in photo mode and not in video mode. You are able to identify this through the icon on the top left corner on the screen (there will be a camera icon in photo mode).

If you are not in this mode quick press the **POWER ON / OFF** Button to change between modes. Once you are in **Photo Mode**, press the **SHOOT / RECORD** Button on the top of the unit to take a photo.

You have the option of changing the image resolution through the ZXM-AC1. You can change between 12, 10, 8, 5, 3, 2, 1.3 Megapixels and VGA. The higher the number, the higher the resolution and the more detailed your photos will be, however they will take up more storage space. The ZXM-AC1 is defaulted to shoot at 5 megapixels. To change resolution, follow the below steps:

1. Ensure you are in **Photo Mode**.
2. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
3. Press the **DOWN** Button once. You will see the '**Image Size**' tab highlight.
4. Press the **SHOOT / RECORD** Button to open the Image Size menu.
5. You can now press the **UP** or **DOWN** Button again to move between options. Once the desired resolution is chosen, press the **SHOOT / RECORD** Button to change.
6. To exit the navigation menu, press the **POWER ON / OFF** Button.

7.2 CAPTURE MODE

Capture Mode allows you to adjust how many images your action camera takes in one 'shot' on the ZXM-AC1. You can change between OFF, 3 Pictures, 5 Pictures and 10 Pictures. The ZXM-AC1 default setting is set to OFF. To change this setting, follow the below steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Press the **DOWN** Button eight times. You will see the '**Capture Mode**' tab highlight.
3. Press the **SHOOT / RECORD** Button to open the Capture Mode menu.

4. You can now press the **UP** or **DOWN** Button again to move between options. Once a desired Capture Mode is chosen, press the **SHOOT / RECORD** Button to change.
5. To exit the navigation menu, press the **POWER ON / OFF** Button.

7.3 DELAYED PHOTO

You are able to use the **Delayed Photo** on the ZXM-AC1. You can change between OFF and ON. The ZXM-AC1 default setting is set to OFF. To change this setting, follow the below steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Press the down Button night times. You will see the '**Delayed Photo**' tab highlight.
3. Press the **SHOOT / RECORD** Button to open the delayed photo menu.
4. You can now press the **UP** or **DOWN** Button again to move between options OFF and ON (3 seconds). Once a desired option is chosen, press the **SHOOT / RECORD** Button to change.
5. To exit the navigation menu, press the **POWER ON / OFF** Button.

7.4 DATE STAMP

The **Date and Time** is displayed on your images by default. While the Date Stamp function is a default feature of the ZXM-AC1, it can be changed by following these steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Press the **DOWN** Button five times. You will see the '**Date Stamp**' tab highlight.
3. Press the **SHOOT / RECORD** Button to open the date stamp menu.
4. You can now press the **UP** or **DOWN** Button again to move between options. Once a desired option is chosen, press the **SHOOT / RECORD** Button to change.
5. To exit the navigation menu, press the **POWER ON / OFF** Button.

8.0 VIDEO SETTINGS

8.1 VIDEO MODE

When you turn on the ZXM-AC1, it will automatically default to **Video Mode**. A video icon in the top left corner of the screen will confirm it is in this mode.

To begin recording press the **SHOOT / RECORD** Button. The blue LED light on the bottom left of the screen will start flashing when recording. You will also see a flashing red dot on the screen next to the Video Camera icon.

To stop recording, press the SHOOT / TRIGGER icon again.

The ZXM-AC1 comes with a fixed resolution of 1080P Full High Definition.

8.2 PLAYBACK MODE

Playback Mode will enable you to view photos and videos you have shot with the ZXM-AC1.

You will need to stop recording to use this feature. You will see the **Playback** icon in the top left corner of the screen when you are in this mode.

To scroll through your photos and videos, use the **UP / DOWN** Button on the right side of the unit. An icon of a video or an image will be visible to show if you're in video or photo mode.

To exit **Playback Mode**, press the **POWER ON / OFF** Button twice. This will return you to the default mode (video).

WATCHING VIDEOS IN PLAYBACK MODE

To watch videos in **Playback Mode**, please follow these steps:

1. Press the **SHOOT / RECORD** Button.
2. To play/ pause this video, press the **SHOOT / RECORD** Button again.
3. To exit the current video playback press the **POWER ON / OFF** Button once.

DELETING FILES IN PLAYBACK MODE

To delete any files that have been taken on the ZXM-AC1 or on the Micro SD Card, follow the below steps.

1. Press and hold the **DOWN** Button on the side of unit to enter into the delete screen.
2. Select either '**Cancel**' or '**OK**' by pressing the **DOWN** Button, the option will be highlighted. To confirm this deletion, press the **SHOOT / RECORD** Button. The file will now be deleted.

8.3 LOOP RECORDING

The **Loop Recording** function allows for the ZXM-AC1 to record continuously, using footage intervals of 1, 2, 3 or 5 minutes. When the **Loop Recording** function is activated, the ZXM-AC1 will delete the oldest recorded loop file and replace it with the newest file when the SD card is full.

If **Loop Recording** is set to OFF, the ZXM-AC1 will record continuously for up to 20 minutes, as a single file. To change either the loop recording interval or to turn OFF **Loop Recording**, follow the below steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Press the **DOWN** Button twice. Loop recording will be highlighted.
3. Press the **SHOOT / RECORD** Button to open the loop recording menu.
4. Five options will appear in the menu: Off, 1 Minute, 2 Minutes, 3 Minutes and 5 Minutes . Press the down Button to the option you require.
5. Press the **SHOOT / RECORD** Button to select.

6. To exit the navigation menu, press the **POWER ON / OFF** Button.
Follow the above steps for all four loop recording options.

NOTE: The factory default setting for loop recording is set to OFF.

8.4 DATE STAMP

The date and time is always displayed on your videos, and this is known as a **Date Stamp**. The date stamp is optional and you can turn this function ON or OFF by following the steps below:

1. Quick press the **POWER ON / OFF** Button on the front of the unit.
This will bring up the navigation menu.
2. Press the **DOWN** Button five times. You will see the '**Date Stamp**' tab highlight.
3. Press the **SHOOT / RECORD** Button to open the Date Stamp menu.
4. You can now press the **UP** or **DOWN** again to move between options. Once a desired capture mode is chosen, press the **SHOOT / RECORD** Button to change.
5. To exit the navigation menu, press the **POWER ON / OFF** Button.

9.0 RESTORE DEFAULT SETTINGS

Selecting this setting will restore the ZXM-AC1 to factory default. Any adjustments to the unit's settings will now be erased.

To restore to **Factory Settings**, follow the below steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Quick press the **POWER ON / OFF** Button again in the navigation menu to navigate to the settings menu.
3. Press the **UP** Button three times to navigate up the menu to **'Restore Default Setting.'** You will see this option highlight.
4. Quick press the **SHOOT / RECORD** Button again once to restore to factory default. You will be prompted to choose **'Cancel'** or **'OK'**.
5. Press the **UP / DOWN** Button to choose the required option. Then press the shoot/restore Button to confirm.

10.0 FIRMWARE VERSION

To check the current Firmware of your ZXM-AC1, follow the below steps:

1. Quick press the **POWER ON / OFF** Button on the front of the unit. This will bring up the navigation menu.
2. Quick press the **POWER ON / OFF** Button again in the navigation menu to navigate to the settings menu.
3. Press the **UP** Button twice to navigate up the menu to 'version'. You will see this option highlight.
4. Press the **SHOOT / RECORD** Button to open the Firmware version.
5. To exit the navigation menu, press the **SHOOT / RECORD** Button once and then press the **POWER ON / OFF** Button once.

To check if a new firmware version is available for your action Cam or for instructions on how to update the firmware on your action Cam, please check for updates on our website.

www.zero-x.com.au | www.zero-x.co.nz

11.0 WARRANTY

WARRANTY TERMS & CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for

collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics, will be borne by you.

Email: admin@zero-x.com.au

INDEMNITY

You agree to defend, indemnify and hold harmless Zero-X and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Zero-X and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Zero-X or its services, or your unauthorized modification or alteration of products or software.

WARRANTY AND WARRANTY DISCLAIMER

Zero-X has a limited warranty, whereby Zero-X warrants to you and only to you that this Zero-X Action Cam will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Zero-X limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Zero-X Action Cam you understand and agree that the Zero-X services are provided on an “as is” and “as available” basis.

Zero-X makes no warranty that the Zero-X product and services will meet your requirements or that use of the Zero-X services will be uninterrupted, timely, secure or error-free. Nor does Zero-X make any warranty as to the accuracy or reliability of any information obtained through Zero-X (including third party content), that any defects in the Zero-X Action Cam will be corrected or that the Zero-X products or Zero-X services will be compatible with any other specific hardware or service. Further, Zero-X does not warrant that the Zero-X Action Cam or the Zero-X servers that provide you with data and content are free of viruses or other harmful components.

Zero-X also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Zero-X Action Cam.

In the event of any loss, damage or injury, you will not look to Zero-X to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Zero-X arising as a result of the payment of any claim for loss, damage or injury.

Zero-X equipment and services do not cause and cannot eliminate occurrences of certain events, including, and Zero-X makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Zero-X equipment and services provided will detect or avert such incidents or their consequences.

Zero-X does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Zero-X.

Other than the above product warranty for the Zero-X Action Cam, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Zero-X services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non infringement of third party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you. Zero-X hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Zero-X does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

LIMITATIONS OF ZERO-X LIABILITY

Under no circumstances will Zero-X be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Zero-X.

Zero-X liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Zero-X. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on willful or grossly negligent breach of contractual duty or obligation on the part of Zero-X, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Zero-X may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Zero-X's liability in the event of Zero-X's willful or intentional misconduct.

12.0 NOTES

Capture the action.™

ZERO-X

ANOTHER
DIRECTED
BRAND



All Images, Information and Content are
Copyright © 2022 Directed Electronics
Australia Pty Ltd. All Rights Reserved.

www.zero-x.com.au | www.zero-x.co.nz