

ZXM-AC2

4K Action Camera with 2.0" Screen + WiFi

USER MANUAL



ZERO-X

CONTENTS

1.0	INTRODUCTION	6
2.0	ABOUT THE ZXM-AC2	6
3.0	WHATS IN THE BOX	6
4.0	COMPONENTS	7
5.0	GETTING STARTED	7
5.1	CHARGING THE BATTERY	9
5.2	MICRO SD CARD COMPATIBILITY	10
5.3	POWERING YOUR ZXM-AC2	10
5.4	FORMAT YOUR MICRO SD CARD.....	10
6.0	ZXM-AC2 CONTROLS AND FUNCTIONS	11
6.1	POWER ON / OFF BUTTON	11
6.2	SHOOT / RECORD BUTTON	12
6.3	ACCESSING SYSTEM SETTINGS.....	12
6.4	SETTING THE DATE & TIME	13
6.5	AUTO POWER OFF.....	14
6.6	WIFI.....	15
6.7	ROTATE IMAGE.....	16
6.8	DVR MODE	17

6.9	SCREEN SAVER.....	18
6.10	LED INDICATOR.....	19
7.0	PICTURE SETTINGS	20
7.1	PHOTO MODE	20
7.2	IMAGE RESOLUTION	20
7.3	TIMER MODE.....	21
7.4	CONTINUOUS PICTURE MODE.....	23
7.5	BURST MODE	24
8.0	VIDEO SETTINGS	25
8.1	VIDEO MODE	25
8.2	VIDEO RESOLUTION	25
8.3	LOOP RECORDING.....	26
8.4	TIME LAPSE.....	27
8.5	SLOW MOTION.....	28
8.6	MICROPHONE.....	29
8.7	PLAYBACK MODE	29
8.7.1	WATCHING VIDEOS IN PLAYBACK MODE.....	30
8.7.2	DELETING FILES IN PLAYBACK MODE	30
9.0	RESTORE DEFAULT SETTINGS	31
10.0	FIRMWARE VERSION	32

11.0	INSTALLING AND USING THE ZX-20 APP.....	33
12.0	MANUAL STEPS FOR CONNECTING TO THE ZX-20 APP.....	33
	
12.1	ZX-20 APP.....	34
12.2	SAVING PHOTOS AND VIDEOS VIA THE APP.....	35
12.3	REMOTE PHOTO/RECORD VIA THE APP.....	36
12.4	ADJUSTING SETTINGS VIA THE APP.....	36
13.0	WARRANTY.....	37
14.0	NOTES.....	42

1.0 INTRODUCTION

Thank you for purchasing the Zero-X ZXM-AC2 action camera. Please read through the User Manual before attempting to use the ZXM-AC2.

FEATURES

- 4K Recording @ 30 FPS
- 2.0" Screen
- Waterproof Case

2.0 ABOUT THE ZXM-AC2


The Zero-X ZXM-AC2 shoots footage with dynamic realism, where action is effortlessly captured into moments you can keep. The ZXM-AC2 also has a range of accessories available from our stockists and the Zero-X website.

www.zero-x.com.au | www.zero-x.co.nz

3.0 WHATS IN THE BOX

1 x ZXM-AC2 Action Camera	1 x 3 Way Mount
1 x USB Charging & Data Cable	1 x Frame Mount
1 x Waterproof Casing	4 x Straps
1 x Bike Mount	1 x Adaptor Mount
1 x Quick Release Mount	1 x Metal Tether
1 x 3M Adhesive Mount	2 x 3M Adhesive Pads

4.0 COMPONENTS

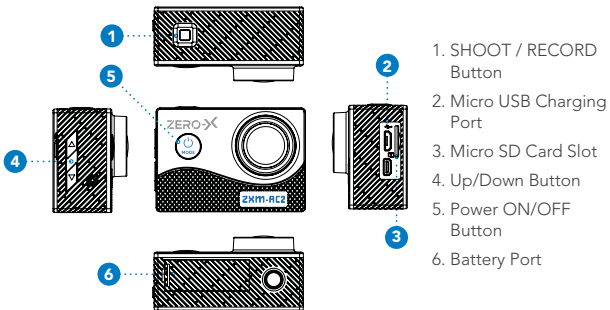

5.0 GETTING STARTED

CAUTION:

Before using your action camera please ensure you read and understand the following safety precautions.

- Do not use the ZXM-AC2 in water unless it is enclosed in its waterproof case.
- Do not use the ZXM-AC2 with the waterproof case in water deeper than 30m.
- Always check the waterproof case seal is clean and free of debris before it is used in water.
- Do not attempt to open the ZXM-AC2 camera or modify it. If the ZXM-AC2 has been tampered with the warranty will be void. Maintenance and repairs should only be performed by Zero-X customer service representatives. Please see the warranty at the end of this manual for more information.
- Do not handle or charge the ZXM-AC2 with wet hands unless it is enclosed in its waterproof case. This will help avoid damage to your camera.
- Only recharge the ZXM-AC2 battery using the supplied USB cable.
- Do not use the ZXM-AC2 in temperatures that exceed 55°C.
- Do not drop, crush, pierce, bend, deform, microwave, incinerate or shoot the ZXM-AC2.

BATTERY WARNING

Always charge the ZXM-AC2 using the provided USB Cable. If the ZXM-AC2 is not charged as directed in this manual, the battery may become damaged and fail.

- Never dismantle the ZXM-AC2 or expose the internal battery cell.
- Do not dispose of the ZXM-AC2 in fire.
- Please dispose of the ZXM-AC2 mindfully and observe local regulations, especially in regards to the safe disposal of the internal battery. Check your local recycling facility for more information.
- Do not attempt to expose the internal battery cell.
- Only use a certified 5V 1A USB charger to charge the ZXM-AC2. Using non certified chargers could potentially damage the ZXM-AC2, or the ZXM-AC2 battery and void the warranty.
- Do not let the battery charge overnight.
- If the ZXM-AC2 seems to still need charging after three hours, temporarily remove it from its charger as the battery may overheat. Let it cool down for 30 minutes and try charging again.

5.1 CHARGING THE BATTERY

We recommend that you fully charge your ZXM-AC2 before use. A full charge will take approximately 2.5 hours using a 5V 1A Charger.

The LED light on the back of the ZXM-AC2 indicates the status of the Unit's charging cycle. It will flash RED while charging. When the ZXM-AC2 is fully charged the LED light will stay RED.

5.2 MICRO SD CARD COMPATIBILITY

The ZXM-AC2 requires a Micro SD Card (not included) to save recorded files. We recommend purchasing a maximum 64GB, Class 10 or higher Micro SD Card from a well known brand.

NOTE: The Micro SD Card should easily slide into your ZXM-AC2. Do not force the Micro SD Card into the slot, as it may damage the Unit and the Micro SD Card.

5.3 POWERING YOUR ZXM-AC2

To power ON your ZXM-AC2 follow the below steps:

1. Insert the battery into the Unit.
2. Press and hold the **POWER ON / OFF** Button on the front of the Unit until the start-up screen appears.

5.4 FORMAT YOUR MICRO SD CARD

Before you start using the ZXM-AC2, we recommend that you format the Micro SD card. You can do this via the ZXM-AC2, by following these instructions:

1. Once the ZXM-AC2 is fully charged, insert your Micro SD Card into the correct slot (see 4.0 COMPONENTS).
2. Press the **POWER ON / OFF** Button on the front of the Unit to turn ON the ZXM-AC2.

3. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
4. Press the **POWER ON / OFF** Button three times, this will open up the ZXM-AC2 hardware Settings menu.
5. Press the **DOWN** Button twice on the right side of the Unit to navigate down the menu to 'Format'.
6. Press the **SHOOT/ RECORD** Button again to open the Format section.
7. Press the **UP / DOWN** Button again to select either '**Confirm**' or '**Cancel.**' This will initiate the formatting of the Micro SD card.

NOTE: Formatting the Micro SD card will permanently erase any data already stored on the Micro SD card. Be sure to save your data prior to Formatting.

6.0 ZXM-AC2 CONTROLS AND FUNCTIONS

6.1 POWER ON / OFF BUTTON

The **POWER ON / OFF** Button is located on the top left hand corner of the ZXM-AC2. This is used to power the Unit ON / OFF.

The **POWER ON / OFF** Button is also used to change between camera Modes, Settings, and also serves as the back Button when you are in the navigation Settings.

6.2 SHOOT / RECORD BUTTON

The **SHOOT / RECORD** Button is located on right side on top of the ZXM-AC2. This Button is interchangeable and is used to both shoot still images and record videos.

The **SHOOT / RECORD** Button is also used to access the Settings menus, select menu items and confirm your selection.

6.3 ACCESSING SYSTEM SETTINGS

You can access system **Settings** when using any of the camera Modes. To access system Settings for the ZXM-AC2 follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the **Settings** menu.
3. Quick press the **SHOOT / RECORD** Button once to activate the **Settings**.

NOTE: To move through the **Settings** tabs, press the **POWER ON / OFF** Button. To move through the **Settings** tab options, use the **UP / DOWN** arrow Buttons. To select a **Setting**, adjust or confirm and use the **SHOOT / RECORD** Button.

6.4 SETTING THE DATE & TIME

To set the correct **Date and Time** on your ZXM-AC2, follow the below steps once your Unit is powered ON:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button three times, this will open up the ZXM-AC2 hardware Settings menu.
4. Press the **DOWN** Button once on the right side of the Unit to navigate down the menu to '**Date-Time**'.
5. Quick press the **SHOOT / RECORD** Button again once to open the **Date/Time** Settings. A screen will appear with the **Date and Time**.

NOTE: The number which has a highlighted blue box can be changed with the up and down Buttons. The date is set as DD/MM/YYYY, and the time is 24 hour set as HH:MM:SS.

5. Set the correct **Date and Time**. Once you have adjusted the first value, press the **SHOOT / RECORD** Button to jump to the next value (you will notice the next value will now highlight a blue box).

- When all adjustments have been made for **Date and Time**, Press the **SHOOT / RECORD** Button to exit the **Date-Time** menu. To exit the Settings Menu press the **POWER ON / OFF** Button once, where you will be prompted to press the **SHOOT / RECORD** Button to confirm you are exiting the feature.

6.5 AUTO POWER OFF

The **Auto Power OFF** function is designed to help extend the battery life of the ZXM-AC2. It will **Auto Power OFF** after a selected period of inactivity (1, 3, 5 minutes). The ZXM-AC2 is set to turn off after 1 minute. To adjust these settings, follow the below steps:

- Press the **SHOOT / RECORD** Button to end recording (if required).
- Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
- Press the **POWER ON / OFF** Button twice, this will open up the ZXM-AC2 system Settings menu.
- Press the **DOWN** Button 8 times to navigate down the menu to **Auto Power OFF** . You will see this option highlight.
- Quick press the **SHOOT / RECORD** Button, once to open the **Auto Shutdown Settings**. Four options will appear on the menu: 1 minute, 3 minutes, 5 minutes and OFF.

Press the **DOWN** Button and select the option you require.

6. Press the **SHOOT / RECORD** Button to select.
7. To exit the Settings Menu, press the **POWER ON / OFF** Button twice. You will be prompted to press the **SHOOT / RECORD** Button to confirm exiting.

Follow the steps for all **Auto Power OFF** options.

6.6 WIFI

The ZXM-AC2 comes with inbuilt **WiFi**, allowing you to access your footage and photos through your smartphone. Your smartphone can also act as a wireless monitor for your action camera.

The ZXM-AC2 default setting is to have **WiFi** turned OFF.

To alter this setting follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times to open the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **DOWN** Button twice to navigate down the menu to **'WiFi'**, you will see this highlighted.
5. Press the **SHOOT / RECORD** Button to open the **WiFi** details (**WiFi name and password**).

6. Open your smartphone's **WiFi Settings** and search for the device name that is shown on the ZXM-AC2 screen. Click this name and enter in the password (also on the screen). You can now access the ZXM-AC2 through the App. When WiFi is connected, the LED indicator light at the top of the Unit will slowly and continuously flash red. (See section 11.0 for App Information)

NOTE: When **WiFi** is connected to your smartphone, you cannot use the functions on the ZXM-AC2 via the camera. However you can manage functions via the App while the action camera is in this mode. You can control functions via the ZXM-AC2 again once you have finished downloading your images and or videos onto your smartphone through the App. Please refer to section 12.1 for more details about how to use the App.

7. To exit out of **WiFi** mode, press the **UP** Button.

6.7 ROTATE IMAGE

You have the ability to flip the image vertically (upside down) when you are using the ZXM-AC2, by turning on the **Rotate Image** function.

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.

3. Press the **POWER ON / OFF** Button twice, to open the ZXM-AC2 system Settings menu.
4. Press the **DOWN** Button 3 times to navigate down the menu to **'Rotate Image'**. You will see this option highlight and a tick inside a box will appear.
5. Press the **SHOOT / RECORD** Button to **Rotate Image**.
6. To exit the Settings, press the **POWER ON / OFF** Button twice, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

6.8 DVR MODE

When **DVR Mode** is activated, the ZXM-AC2 will continue to record until the Unit has run out of power. To change this setting, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button 4 times to open the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button twice, this will open up the ZXM-AC2 system Settings menu.
4. Press the **DOWN** Button 4 times to navigate down the menu to **'DVR Mode'**. This option will be highlighted. If this function is activated there will be a tick in the box.
5. Press the **SHOOT / RECORD** Button to either activate or deactivate **'DVR Mode.'**

6. To exit the Settings menu, press the **POWER ON / OFF** Button twice.
You will be prompted to press the **SHOOT / RECORD** Button to exit.

6.9 SCREEN SAVER

The **Screen Saver** function allows you to use your action camera but also conserve power, by allowing the LCD display to turn OFF while the camera continues to record.

There are four options to activate within this function, however the default time setting is 20 seconds. To change the this setting, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button twice, this will open up the ZXM-AC2 system Settings menu.
4. Press the **DOWN** Button 7 times to navigate down the menu to '**Screen Saver**'. This option will highlight when selected.
5. Quick press the **SHOOT / RECORD** Button again once to open the **Screen Saver Settings**. Four options will appear on the menu: 10 seconds, 20 seconds, 30 seconds and OFF. Press the **UP / DOWN** Button to the option you require.
6. Press the **SHOOT / RECORD** Button to select.

7. To exit the Settings Menu, press the **POWER ON / OFF** Button twice, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

Follow the steps for all four **Screen Saver** options.

6.10 LED INDICATOR

The ZXM-AC2 has **LED Indicator** lights that indicate if a function is active.

The **LED Indicator** on the top of the Unit notifies you when WiFi is connected by a constantly flashing red light. There are also two small **LED Indicator** lights on the left side of the screen:

- The red **LED Indicator** light shows the ZXM-AC2 is currently charging.
- The blue **LED Indicator** light will stay solid blue when not recording, and when recording, it will flash blue.

The ZXM-AC2 LED Indicator light settings can be adjusted from its default setting of ON. To change this setting, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button twice, this will open up the ZXM-AC2 system Settings menu.

4. Press the **DOWN** Button 6 times to navigate down the menu to '**LED Indicator**'. You will see this option highlight. If this function is activated there will be a tick in the box.
5. Press the **SHOOT / RECORD** Button to either activate or deactivate it.
6. To exit, press the **POWER ON / OFF** Button twice. You will be prompted to press the **SHOOT / RECORD** Button to confirm your choice.

7.0 PICTURE SETTINGS

7.1 PHOTO MODE

Before you take a photo, look for a camera icon on the screen to confirm you're in the right mode.

If you are not in this mode press the **POWER ON / OFF** Button to switch modes. Once you are in the correct mode, press the **SHOOT / RECORD** Button on the top of the Unit to take a photo.

7.2 IMAGE RESOLUTION

You have the option of changing the **Image Resolution** through the ZXM-AC2. You can change between 2, 5, 8, 12 and 16 Megapixels. The higher the number, the higher the resolution and the more detailed your photos will be. The ZXM-AC2 is defaulted to shoot at 16 megapixels.

To change the **Image Resolution** follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button once, this will open up the ZXM-AC2 photo Settings menu.
4. As resolution is the first menu option, you will see this highlighted. Press the **SHOOT / RECORD** Button to open this setting.
5. Press the **UP / DOWN** Button to select the option you require, which will highlight when selected. To select this option, press the **SHOOT / RECORD** Button.
6. To exit the Settings, press the **POWER ON / OFF** Button three times, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

7.3 TIMER MODE

You are able to set the **Timer Mode** (to delay recording) on the ZXM-AC2. You can change between: 3 seconds, 5 seconds, 10 seconds, 20 seconds and OFF. The ZXM-AC2 default setting is set to OFF. To change this setting follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).

2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button once, this will open up the ZXM-AC2 photo Settings menu.
4. Press the **DOWN** Button once to navigate down to '**Timer Mode**', you will see this highlighted. Press the **SHOOT / RECORD** Button to open up this setting.
5. Press the **UP / DOWN** Button to the option you require. To select this option, press the **SHOOT / RECORD** Button.
6. To exit the Settings Menu, press the **POWER ON / OFF** Button three times. You will be prompted to press the **SHOOT / RECORD** Button to confirm you are exiting this function.

BEGINNERS TIP: By setting this default to OFF, the camera will only take one photo at a time. The other options have a timed delay before taking a photo. This is great for selfies or when you have no one else to take a photo for you.

7.4 CONTINUOUS PICTURE MODE

Continuous Picture Mode is perfect if you want to take multiple photos but you do not want to keep holding your camera. When activated the ZXM-AC2 will take continuous photos with a set count down between each photo. You can change between: 3 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds and OFF. The ZXM-AC2 default setting is set to OFF. To change follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button once, this will open up the ZXM-AC2 photo Settings menu.
4. Press the **DOWN** Button two times to navigate down to **Continuous Picture Mode**, you will see this highlighted. Press the **SHOOT / RECORD** Button to open up this setting.
5. Press the **UP / DOWN** Button to the option you require, you will see this highlight. To select this option, press the **SHOOT / RECORD** Button.
6. To exit the Settings Menu, press the **POWER ON / OFF** Button three times, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

7.5 BURST MODE

This function will allow you to take multiple photos in a quick succession. You can change between: 3 photos/sec, 5 photos/sec, 20 photos/sec and OFF.

The ZXM-AC2 default setting is set to OFF.

To use **Burst Mode**, you will need to open the Settings menu and follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button once, this will open up the ZXM-AC2 photo Settings menu.
4. Press the **DOWN** Button three times to navigate down to **Burst Mode**, you will see this highlighted. Press the **SHOOT / RECORD** Button to open up this setting.
5. Press the **UP / DOWN** Button to the option you require, you will see this highlight. To select this option, press the **SHOOT / RECORD** Button.
6. To exit the Settings Menu, press the **POWER ON / OFF** Button three times, you will be prompted to press the **SHOOT / RECORD** Button to confirm exiting.

8.0 VIDEO SETTINGS

8.1 VIDEO MODE

When you turn on the ZXM-AC2, it will automatically default to **Video Mode**. A video camera icon on the screen will confirm this.

Once you are in the correct mode, to begin recording, press the **SHOOT / RECORD** Button. The blue LED light on the left side of the screen will start flashing when recording. You will also see a flashing red dot on the screen next to the recording time.

To stop recording, press the SHOOT/RECORD icon again.

8.2 VIDEO RESOLUTION

You can change the **Video Resolution** between: 4K @ 30 FPS, 2.7K @ 30 FPS, 1080P @ 60 FPS, 1080P @ 30 FPS, 720P @ 90 FPS, 720P @ 60 FPS and 720P @ 30 FPS. The ZXM-AC2 default setting resolution is 4K @ 30 Frames Per Second. To change this setting follow the steps below:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page. ZXM-AC2 video Settings is the first menu that comes up.
3. Resolution is the first setting on the list, you will see this highlighted. Press the **SHOOT / RECORD** Button to open up this setting.

4. Press the **UP / DOWN** Button to the option you require, you will see this highlight. To select this option, press the **SHOOT / RECORD** Button.
5. To exit the Settings menu, press the **POWER ON / OFF** Button four times, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

8.3 LOOP RECORDING

The **Loop Recording** function allows for the ZXM-AC2 to record continuously, using footage intervals of 2, 3 or 5 minutes. When the **Loop Recording** function is activated the ZXM-AC2 will delete the oldest recorded loop file and replace it with the newest file when the Micro SD card is full.

If **Loop Recording** is set to OFF, the ZXM-AC2 will record continuously for 18 minutes as a single file. The ZXM-AC2 default setting is 5 minutes. To change either the **Loop Recording** interval or to turn OFF **Loop Recording**, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button four times, this will open the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page. ZXM-AC2 video Settings is the first menu that appears.

3. Press the **DOWN** Button three times to navigate down to '**Loop Recording**' this will highlight when selected. Press the **SHOOT / RECORD** Button to open this setting.
4. Press the **UP / DOWN** Button until the option you require is highlighted. To select this option, press the **SHOOT / RECORD** Button.
5. To exit the Settings menu, press the **POWER ON / OFF** Button four times, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

8.4 TIME LAPSE

When using the **Time Lapse** feature, the ZXM-AC2 will take a sequence of photos over a period of time, merging them seamlessly into a sped up video. There are 8 options to choose from: Off, 0.5 secs, 1 second, 2 seconds, 5 seconds, 20 seconds, 30 seconds and 60 seconds.

The ZXM-AC2 default setting is OFF. To change this follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page. ZXM-AC2 video Settings is the first menu that comes up.
3. Press the down Button twice to navigate down to '**Time Lapse.**' This option will highlight when selected. Press the **SHOOT / RECORD** Button to open this setting.

4. Press the **UP / DOWN** Button to the option you require, you will see this highlight. To select this option, press the **SHOOT / RECORD** Button.
5. To exit the Settings, press the **POWER ON / OFF** Button four times, you will be prompted to press the **SHOOT / RECORD** Button to confirm exiting.

8.5 SLOW MOTION

Record videos in **Slow Motion** with the ZXM-AC2. This is a great way to view clear action shots. You can choose to record in: 1080P @ 60 FPS or 720P @ 90 FPS. The ZXM-AC2 default setting is 720P @ 90 FPS. To use the **Slow Motion** feature, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording (if required).
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page. ZXM-AC2 video Settings is the first menu that comes up.
3. Press the **DOWN** Button four times to navigate down to **Slow Motion**, you will see this highlighted. Press the **SHOOT / RECORD** Button to open up this setting.
4. Press the **UP / DOWN** Button to the option you require, you will see this highlight. To select this option, press the **SHOOT / RECORD** Button.
5. To exit the Settings Menu, press the **POWER ON / OFF** Button four times, you will be prompted to press the **SHOOT / RECORD** Button to exit.

8.6 MICROPHONE

The ZXM-AC2 has the ability to turn the **Microphone** ON or OFF when you are recording. The ZXM-AC2 default setting is ON. To change this and use the **Microphone** while recording, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button four times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page. ZXM-AC2 video Settings is the first menu that comes up.
3. Press the **DOWN** Button once to navigate down to '**Microphone**'. You will see this option highlight. If this function is activated there will be a tick in the box.
4. Press the **SHOOT / RECORD** Button to either activate or deactivate it.
5. To exit the Settings Menu, press the **POWER ON / OFF** Button four times, you will be prompted to press the **SHOOT / RECORD** Button to confirm exiting.

8.7 PLAYBACK MODE

To view your photos and images taken with the ZXM-AC2, you will need to activate the **Playback Mode** function.

1. To open **Playback Mode**, press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording, then press the **POWER ON / OFF** Button 3 times.
2. You will see the **Playback Mode** icon in the top left corner of the screen when you are in this mode.
3. To scroll through your photos and videos use the **UP / DOWN** Button on the right side of the Unit. If it is a video, a play icon will appear in the middle of the screen.
4. To exit Playback mode, press the **POWER ON / OFF** Button. Keep pressing this Button to cycle through to the desired mode.

8.7.1 WATCHING VIDEOS IN PLAYBACK MODE

To watch videos in **Playback Mode**, follow these steps:

1. Press the **SHOOT / RECORD** Button. To pause the video, press the **SHOOT / RECORD** Button again. To exit the current video in **Playback Mode** press the **POWER ON / OFF** Button once.

8.7.2 DELETING FILES IN PLAYBACK MODE

To delete any files that have been taken on the ZXM-AC2, press and hold the **SHOOT / RECORD** Button and then follow these steps.

1. To delete the file press and hold the **SHOOT / RECORD** Button. A delete screen will pop up.
2. You will be prompted with the option to '**Confirm**' or '**Cancel**' deletion. Press the **UP / DOWN** Button to choose the option you require.

3. Press the **SHOOT / RECORD** Button to confirm. The file will now delete.

9.0 RESTORE DEFAULT SETTINGS

Selecting this setting will restore the ZXM-AC2 to **Factory Default**. All setting adjustments you have made to the Unit will be erased.

If you need to restore to factory Settings, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button 4 times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button 3 times, this will open up the ZXM-AC2 hardware Settings menu.
4. Press the **DOWN** Button 3 times on the right side of the Unit to navigate down the menu to **'Factory Reset'**. Press the **SHOOT / RECORD** Button once to open up, you will be prompted with **'Confirm'** or **'Cancel.'**
5. Press the **SHOOT / RECORD** Button to select your option.
6. To exit the Settings Menu press the **POWER ON / OFF** Button once, you will be prompted to press the **SHOOT / RECORD** Button to confirm.

10.0 FIRMWARE VERSION

To check the current **Firmware Version** of your ZXM-AC2, follow the below steps:

1. Press the **SHOOT / RECORD** Button to end recording if you are in video mode and recording.
2. Press the **POWER ON / OFF** Button 4 times, this will open up the Settings menu. Press the **SHOOT / RECORD** Button to activate the Settings page.
3. Press the **POWER ON / OFF** Button 3 times, this will open up the ZXM-AC2 hardware Settings menu.
4. Press the **DOWN** Button 4 times on the right side of the Unit to navigate down the menu to '**Firmware Version**'. Press the **SHOOT / RECORD** Button once to open up the firmware information.
5. To exit the '**Firmware Version**' press the **POWER ON / OFF** Button twice, you will be prompted to press the **SHOOT / RECORD** Button to confirm exiting.

To check if a new **Firmware Version** is available for your action camera or for instructions on how to update it on your action camera, please check our website.

www.zero-x.com.au | www.zero-x.co.nz

11.0 INSTALLING AND USING THE ZX-20 APP

Please scan the below QR code.

OR

Please search the App store or Google Play Store for 'ZX-20'.

NOTE: The ZX-20 App requires iOS 10.0 and above or Android 5.0 to run. When using the App, please note: Android users will be taken to a home screen before entering the shoot screen. iPhone users will be taken straight to the shoot screen once they have connected the ZXM-AC2 to the App.

12.0 MANUAL STEPS FOR CONNECTING TO THE ZX-20 APP

Turn on your smartphone and scan the QR code or search the App store for ZX-20 and download the App.



12.1 ZXM-AC2 APP

The ZXM-AC2 has an in-built WIFI connection which is used to wirelessly connect your smartphone to your ZXM-AC2 Action camera. This will allow you to view files, change Settings, trigger recording on your smartphone or to use your smartphone as an external wireless monitor to the ZXM-AC2.

CONNECTING THE ZXM-AC2 TO WIFI

1. Once the App is downloaded, enter your smartphone's WiFi Settings and select the connection; ZXM-AC2_XXXX. (XXXX will be your unique number to your ZXM-AC2). Please see page 15 WiFi for further information about connecting through WiFi.
2. Once you have connected the ZXM-AC2 to your smartphone a tick icon will appear next the to WiFi name on your smartphone. You can now open the ZX-20 App on your smartphone.

NOTE: Ensure that WiFi on the ZXM-AC2 and your smartphone are both turned on. If your WiFi is turned off on your smartphone, turn it on and refresh the search. To see how to turn on the WiFi for the ZXM-AC2, see page 15. Do not connect your smartphone to any other WiFi networks when you are connecting the ZXM-AC2 to its App.

3. The App will prompt you to connect to a network. Make sure the ZXM-AC2_XXXX WiFi name is the one that appears. If it does not, try connecting prior to opening the App.

12.2 SAVING PHOTOS AND VIDEOS VIA THE APP

All **Photos and Videos** that are taken on the ZXM-AC2 will be automatically saved to the inserted Micro SD. You can also save **Photos and Videos** wirelessly onto your smartphone through the ZX-20 App.

To **Save Photos and Videos** wirelessly, please follow these steps:

Connect the ZXM-AC2 to your smartphone via WiFi as per previous steps.

1. Launch the ZX-20 App on your smartphone.
2. On the home screen, press **'Gallery'**, this is the middle icon on the bottom bar within the App.
3. Once you are in the gallery, you will see on the top bar of the App **'Phone'** and **'ZXM-AC2.'** One will be highlighted. If ZXM-AC2 is not highlighted, press this tab.
4. A pop up will appear under this tab with **'Download'** or **'Delete.'** Press **DOWNLOAD**. You can now select all the images or videos you wish to download by pressing the circles on the right side of the file name.
5. Press **'Confirm'** on the bottom right of the screen to begin the download.

12.3 REMOTE PHOTO/RECORD VIA THE APP

If you wish to use the App to **Remotely Record a Photo or Video**, follow the steps on the next page:

1. Launch the ZX-20 App on your smartphone.
2. The App will open directly to the remote shooting screen. If it does not, press the **'Capture'** icon on the bottom left corner on App.
3. You can choose between video, camera and slow motion by clicking on the matching icons. Each icon will have different options. Select your preferred option.
4. Press the same icon for the mode you have chosen again to either take the photo or begin recording.

12.4 ADJUSTING SETTINGS VIA THE APP

If you prefer to change the **Settings** of the ZXM-AC2 via the App you can do this through the **Settings** tab. Follow the below steps:

1. Press the **'Settings'** icon on the bottom right of the App screen.

All the **Settings** are listed on this screen under each category. To either change them or turn them on, press on the required tab and select the option you prefer.

13.0 WARRANTY

WARRANTY TERMS & CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for

collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics, will be borne by you.

Email: admin@zero-x.com.au

INDEMNITY

You agree to defend, indemnify and hold harmless Zero-X and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Zero-X and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Zero-X or its services, or your unauthorized modification or alteration of products or software.

WARRANTY AND WARRANTY DISCLAIMER

Zero-X has a limited warranty, whereby Zero-X warrants to you and only to you that this Zero-X Action camera will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Zero-X limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Zero-X Action camera you understand and agree that the Zero-X services are provided on an “as is” and “as available” basis.

Zero-X makes no warranty that the Zero-X product and services will meet your requirements or that use of the Zero-X services will be uninterrupted, timely, secure or error-free. Nor does Zero-X make any warranty as to the accuracy or reliability of any information obtained through Zero-X (including third party content), that any defects in the Zero-X Action camera will be corrected or that the Zero-X products or Zero-X services will be compatible with any other specific hardware or service. Further, Zero-X does not warrant that the Zero-X Action camera or the Zero-X servers that provide you with data and content are free of viruses or other harmful components.

Zero-X also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Zero-X action Camera.

In the event of any loss, damage or injury, you will not look to Zero-X to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Zero-X arising as a result of the payment of any claim for loss, damage or injury.

Zero-X equipment and services do not cause and cannot eliminate occurrences of certain events, including, and Zero-X makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Zero-X equipment and services provided will detect or avert such incidents or their consequences.

Zero-X does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Zero-X.

Other than the above product warranty for the Zero-X Action camera, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Zero-X services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non infringement of third party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you. Zero-X hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Zero-X does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

LIMITATIONS OF ZERO-X LIABILITY

Under no circumstances will Zero-X be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Zero-X.

Zero-X liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Zero-X. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on willful or grossly negligent breach of contractual duty or obligation on the part of Zero-X, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Zero-X may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Zero-X's liability in the event of Zero-X's willful or intentional misconduct.

14.0 NOTES

Capture the action.™

ZERO-X

ANOTHER
DIRECTED
BRAND



All Images, Information and Content are
Copyright © 2022 Directed Electronics
Australia Pty Ltd. All Rights Reserved.

www.zero-x.com.au | www.zero-x.co.nz